


RWB27Si Timeswitch



Daily Programming

RWB27Si Controls

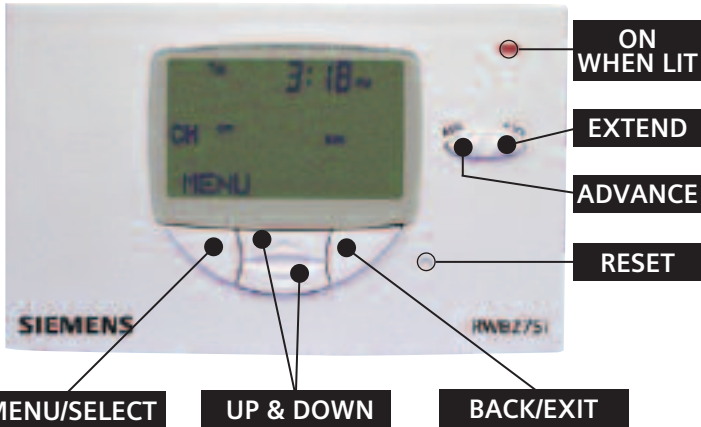

Introduction

This booklet gives you easy to follow instructions allowing you to set your RWB27Si Timeswitch to the Daily, (same ON/OFF times each day) program.

Contents

- ① How do I change/set the ON/OFF times?
- ② How do I review the current ON/OFF times?
- ③ What do the switching options mean?
- ④ How do I select my Switching Options?
- ⑤ How do I set my holiday program?
- ⑥ How do I activate my holiday program?
- ⑦ What do the buttons do?
- ⑧ What does the Boiler Service Interval Reminder do?
- ⑨ Notes on RWB27Si settings.

To make it easier to follow, the buttons you should be using are coloured grey.

RWB27Si Daily




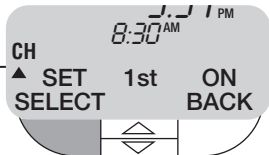
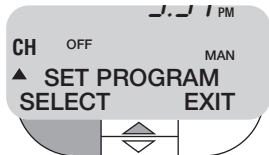
At first installation
display will show as
above unless reset is
activated.



At first installation
display will show as
above when reset is
activated.


How do I change/set the ON/OFF times?

- Press left hand button MENU
- Press top middle button  until SET PROGRAM is shown
- Press left hand button SELECT display will show _____





(continued on next page)


To change 1st ON time press
SELECT, time will flash, change
times by using \triangle +/− ∇ , when
desired time is in the display press
ENTER display will show

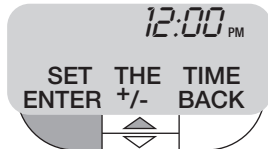



- Repeat as above until last OFF
time is entered
display will show
press EXIT to return to MENU

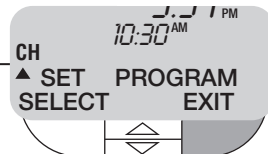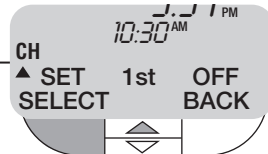


How do I review the current ON/OFF times?

- Press left hand button MENU
- Press top middle button  until REVIEW PROG is shown
- Press left hand button SELECT
- 1st ON time will be shown


(continued on next page)

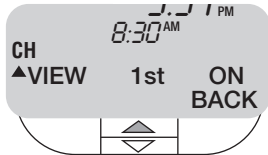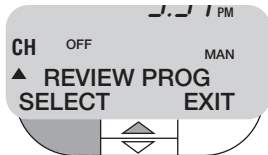


- Press top middle button 
1st OFF will be shown



- Continue above two actions until last OFF is shown

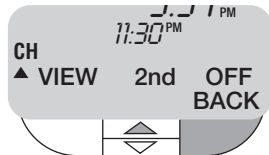

- Press right hand button BACK then press again EXIT (this will return you to MENU)

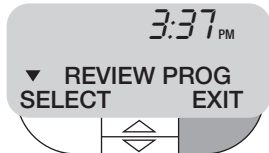

What do the switching options mean?

AUTO

This means that the RWB27Si will switch ON and OFF according to the programmed times

MANUAL OFF

This means that the RWB27Si will be permanently OFF


MANUAL ON




This means that the RWB27Si will be permanently ON

ONCE

This means that the RWB27Si will switch ON at the first ON time and switch OFF at the last OFF time you have programmed ignoring any ON/OFF times in between. This is also referred to as All Day.



How do I select my four switching options?

- Press left hand button MENU
Display shows _____
- Press left hand button SELECT
twice, Display shows _____
- Press top middle button  until
your switching option is displayed
AUTO*
MANUAL OFF*
MANUAL ON*
ONCE*
*see previous page for details
- Choose desired option by pressing
ENTER

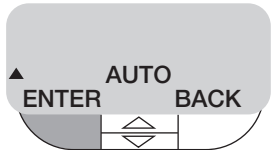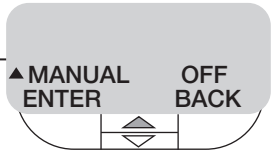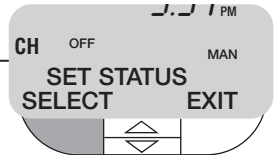





(continued on next page)

 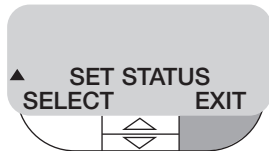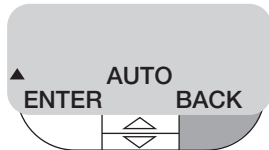- Press right hand button BACK
- Press right hand button EXIT
Display shows _____




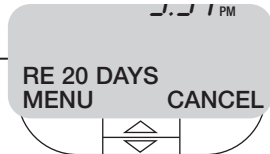
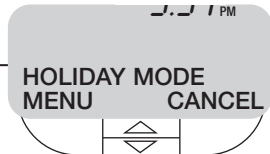
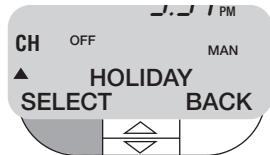
How do I set my holiday program?

- Press left hand button MENU
- Press top middle button  until SET HOLIDAY is shown
- Press left hand button SELECT display shows _____ number of holiday days will flash, change amount of days (1-99) by using  +/- , when desired amount of days is in the display press left hand button ENTER, then right hand button EXIT to return to MENU

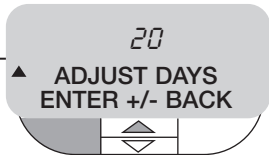

How do I activate my holiday program?

- Press left hand button MENU
SET STATUS is shown,
press SELECT
- Press top middle button 
until HOLIDAY is shown
- Press left hand button SELECT
display will flash as shown—
your system is now in HOLIDAY
mode (OFF) and will countdown
the amount of days you have set
it for, at the end of which it will
automatically go back to your
normal set program.
You can also press CANCEL to
return to normal program mode.



What do the buttons do?

ADV (ADVANCE)

This brings forward the next switching time, for example:-

- (a) if your times were ON 7am and OFF 9am - ON 5pm and OFF 10pm and you pressed the ADV at 4pm your heating would come ON straight away and go OFF at 10pm.
- (b) if your times were ON 7am and OFF 9am - ON 5pm and OFF 10pm and you pressed the ADV at 9pm your heating would go OFF straight away and come ON at 7am the next morning.

+ HRS

This allows you to either increase your heating time in multiples of one hour (up to a maximum of 3 hours) during a timed ON period or to bring on the heating in multiples of one hour (up to a maximum of 3 hours) during an OFF period.

What does the Boiler service interval reminder do?

The Boiler interval reminder function is an aid to compliance with Regulation 36 of the Gas safety (installation and user) regulations 1998 requiring a landlord to carry out a safety check at intervals no more than 12 months apart.

If therefore, this function has been enabled on your RWB27Si you will see a message on the screen informing you of the amount of days remaining until your next service is due, up to 30 day's prior to its service date (this reminder period will be set by the engineer).

If the message 'SERVICE DUE SYSTEM OFF' appears this indicates that the system has been turned OFF for your safety and you should arrange for an engineer to service the boiler as quickly as possible.

The boiler can still be used to obtain basic services for a limited time by pressing the + hrs button.

Notes on RWB27Si settings.

Your RWB27Si comes with the correct day of the week, date and time preset, it will also automatically switch to and from daylight saving hours.

Should you at anytime or for any reason need to manually adjust the clock settings, please refer to the following pages.

To manually adjust the clock?

- Display shows _____
Press MENU




- Press bottom middle button ▼
until display shows _____



Press SELECT display shows _____

- Alter time using ▲+/-▼ buttons to scroll, when correct time is shown press left hand button ENTER and then press right hand button EXIT

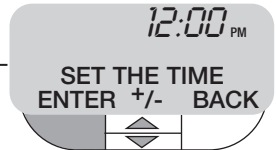

What is a programmer?

... an explanation for householders

Programmers allow you to set 'On' and 'Off' time periods. Some models switch the central heating and domestic hot water on and off at the same time, while others allow the domestic hot water and heating to come on and go off at different times.

Set the 'On' and 'Off' time periods to suit your own lifestyle. On some programmers you must also set whether you want the heating and hot water to run continuously, run under the chosen 'On' and 'Off' heating periods, or be permanently off.

The time on the programmer must be correct. Some types have to be adjusted in spring and autumn at the changes between Greenwich Mean Time and British Summer Time.

You may be able to temporarily adjust the heating programme, for example, 'Override', 'Advance' or 'Boost'. These are explained in the manufacturer's instructions.

The heating will not work if the room thermostat has switched the heating off. And, if you have a hot-water cylinder, the water heating will not work if the cylinder thermostat detects that the hot water has reached the correct temperature.